



Remote Control Guide

Device Selection

Send commands to TV, audio, DVD, auxiliary device or set top box

DVR LIST

For future use

MENU

Displays Menu Bar

Arrow Buttons

Move highlight in system screens

GUIDE

Displays Guide

DAY - / DAY +

Jumps Guide 1 day ahead or back

Function Buttons

Reserved

VOL +/-

Adjusts volume

MUTE

Toggle audio on/off

Number Pad

Enter a channel number or PIN

POWER

Turn a selected device on/off

Playback Controls

Control playback of DVD, DVR or VOD

Record

Begin DVR recording

INFO

Display the Info Bar

OK

Enter a choice you have made

EXIT

Close and screen and return to TV

PG +/-

Jump Guide 1 page up or down

CH +/-

Change the channel

VOD

For future use

LAST

Return to previous channel

